
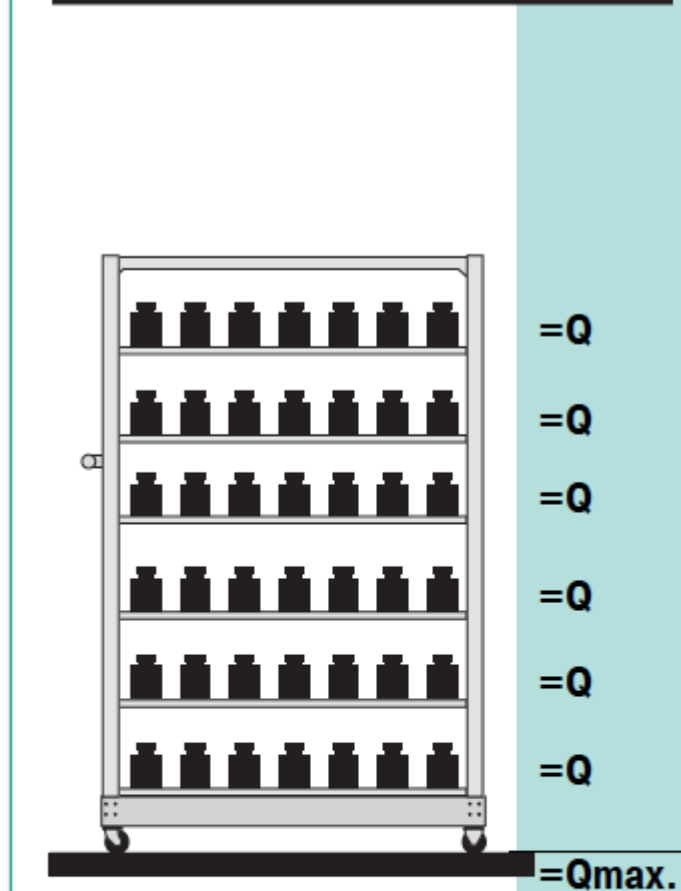
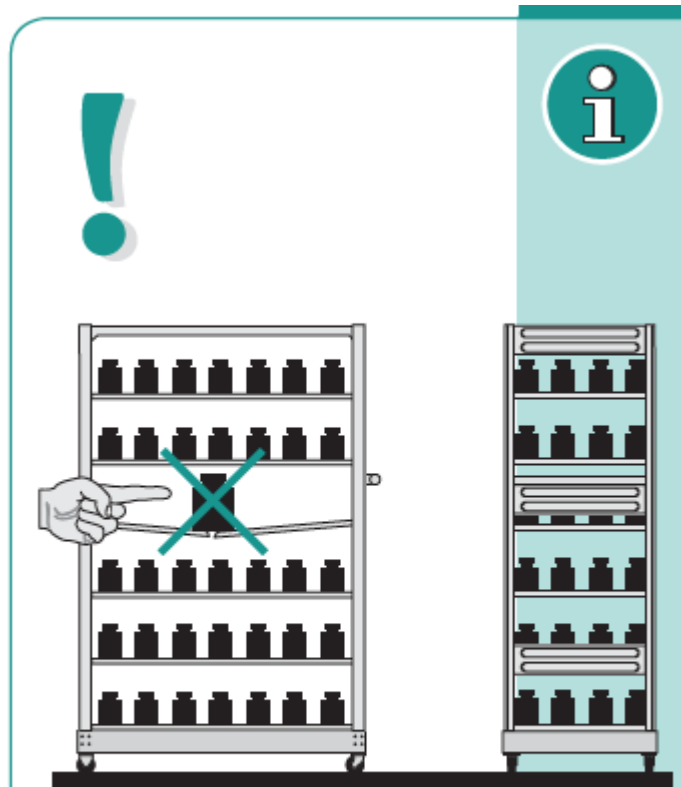
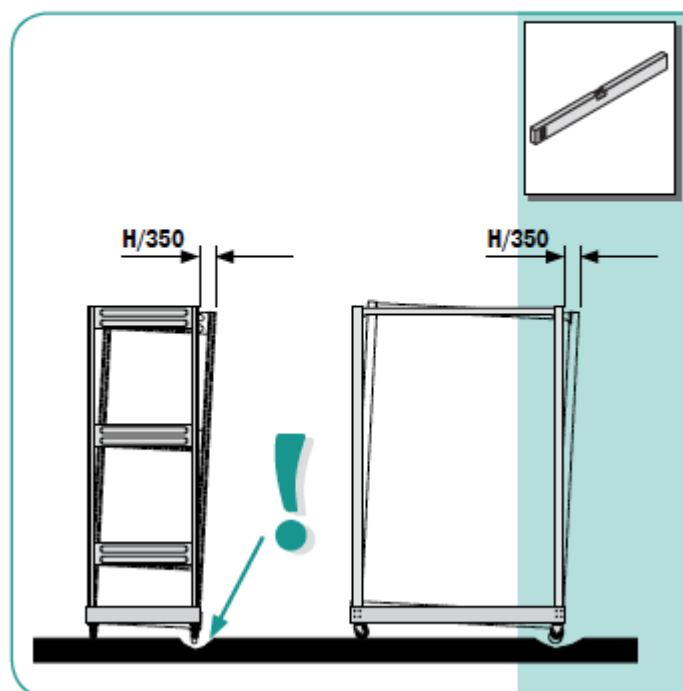
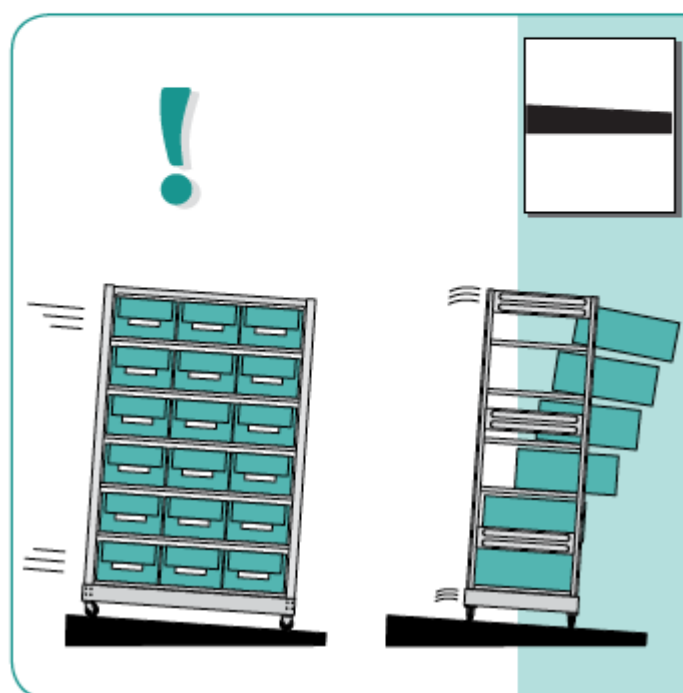


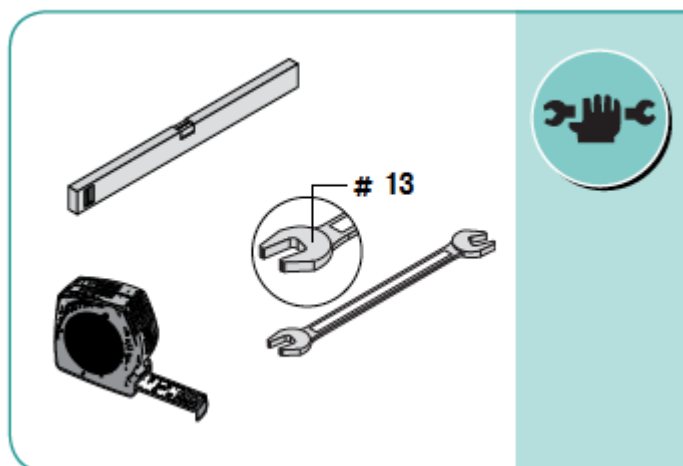


! $\Sigma Q \leq Q_{max.}$


INSTRUCCIONES DE MONTAJE

ESTANTERÍAS INDUSTRIALES MÓVILES

comansa
COMERCIAL DE MANUTENCIÓN S.L.

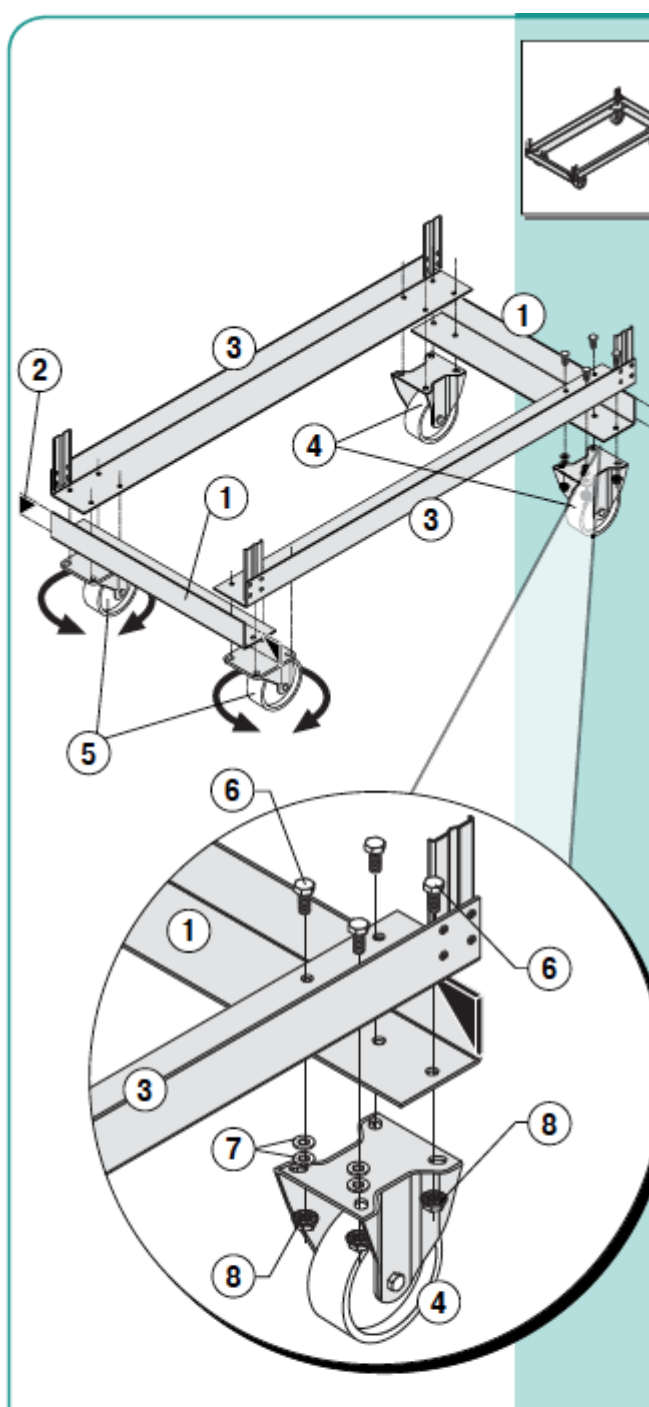

1		L= 524 mm	2)
2		VL 50 x 50 x 10 mm	4)
3		L= 1.058/1.358 mm	2)
4		Ø125 mm	2)
5		Ø125 mm	2)
6		M8x16 DIN EN ISO 4017	16)
7		ø8,4 DIN EN ISO 7089	16)
8		M8	16)



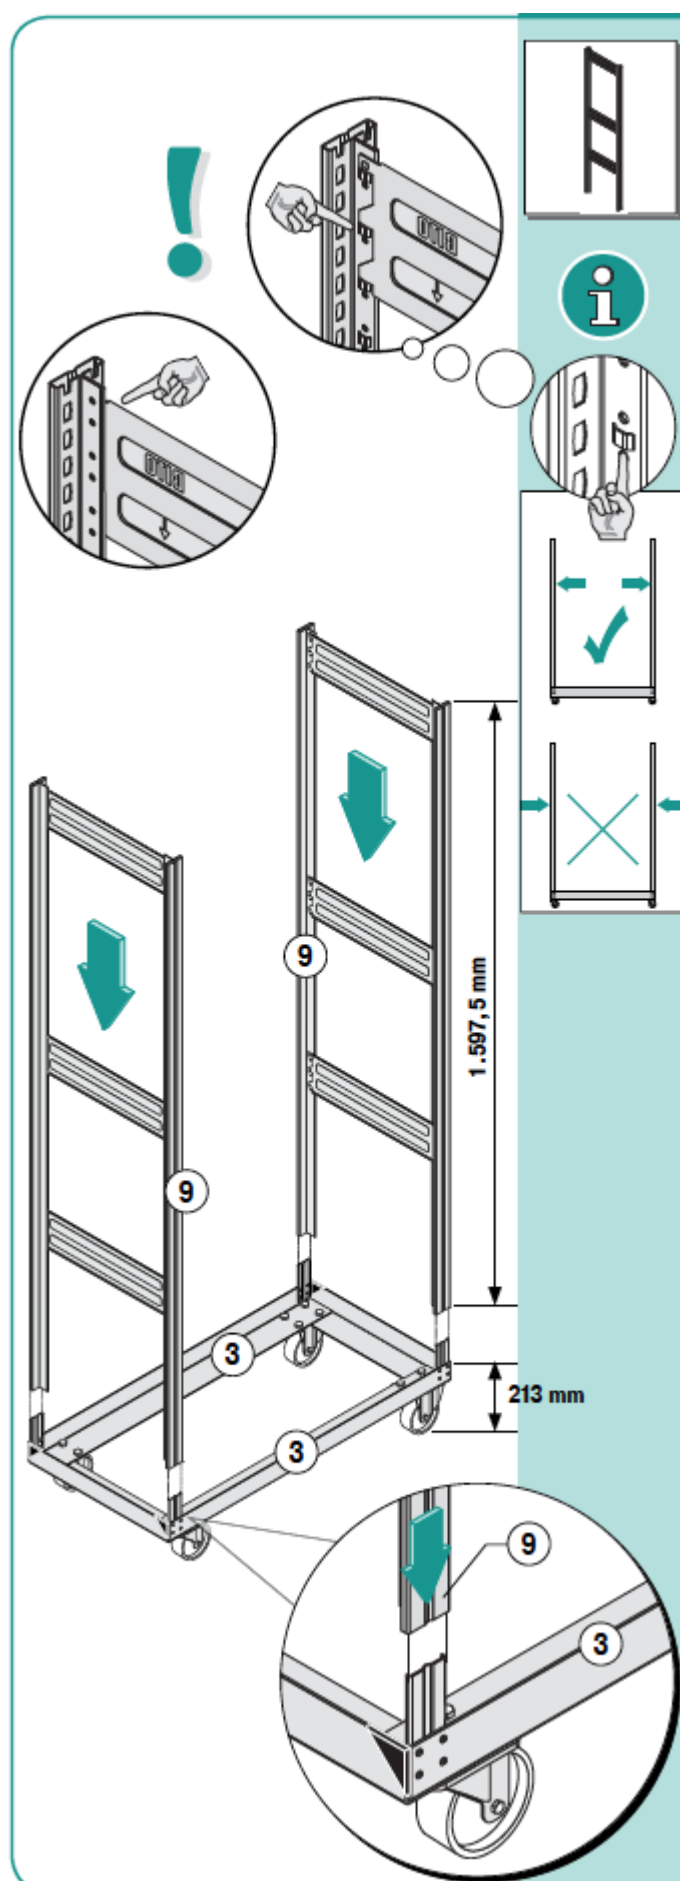


RW 7N


A

2x

10

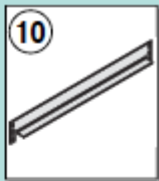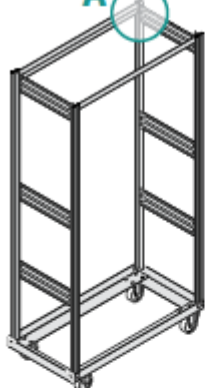

Q=

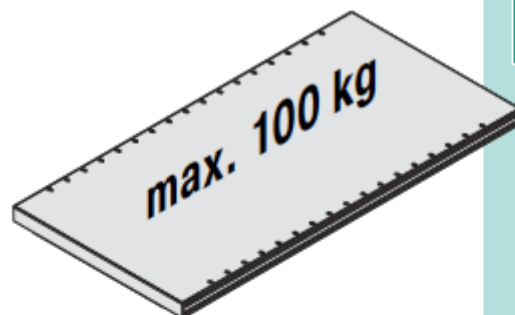

RW 7N

RW 1354



A

4x

10

250 mm

250 mm

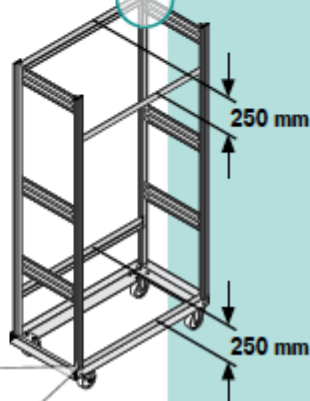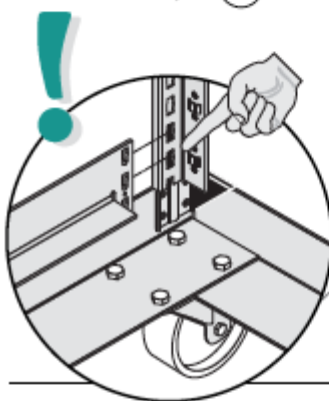

Q=





RW 1354

1.

A

10

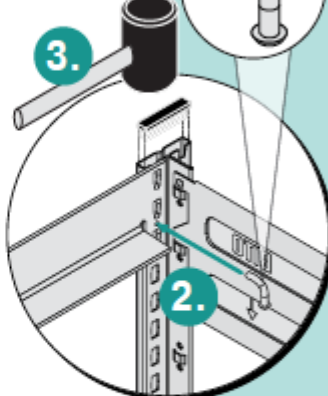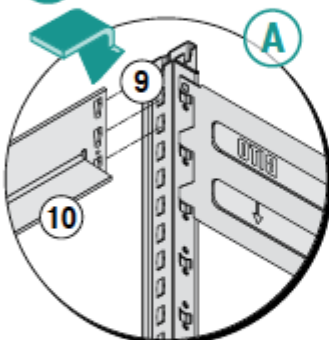

16

3.

2.

!


10

1x

ø2,6x26 mm

=2x

16

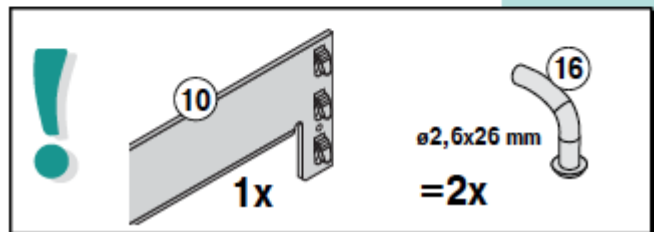

Qmax. =500 kg



RW 7N

RW 1354

!



$\Sigma Q \leq Q_{max.}$

INSTRUCCIONES DE MONTAJE





ESTANTERÍAS INDUSTRIALES MÓVILES

comansa
COMERCIAL DE MANUTENCIÓN S.L.

RW 7N

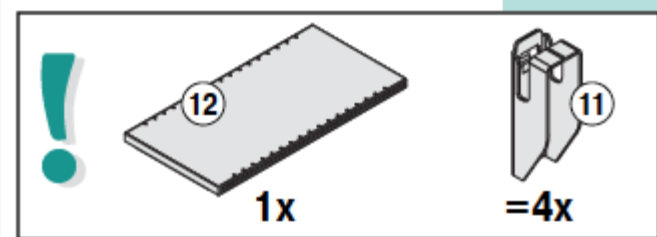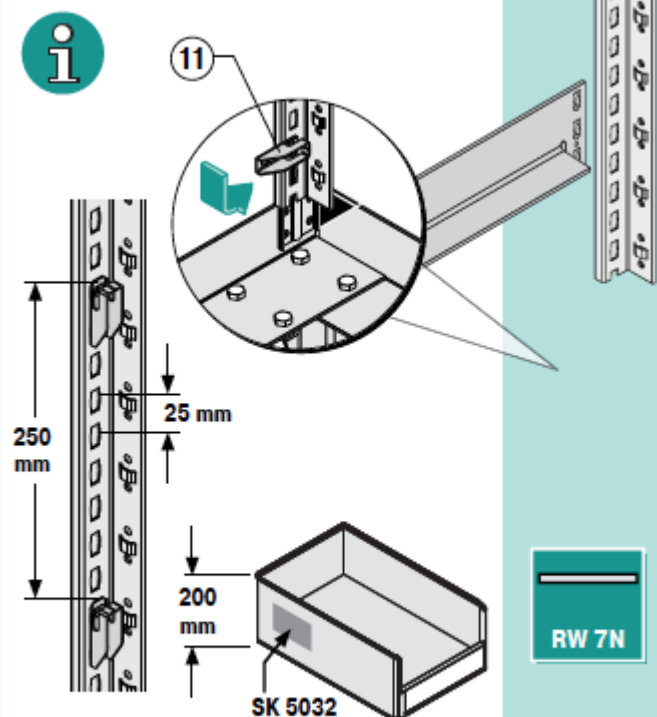

RW 1354

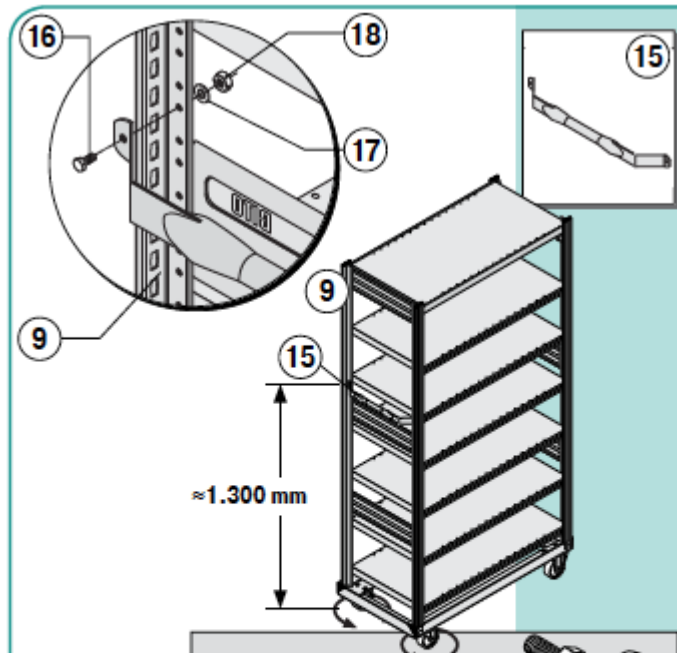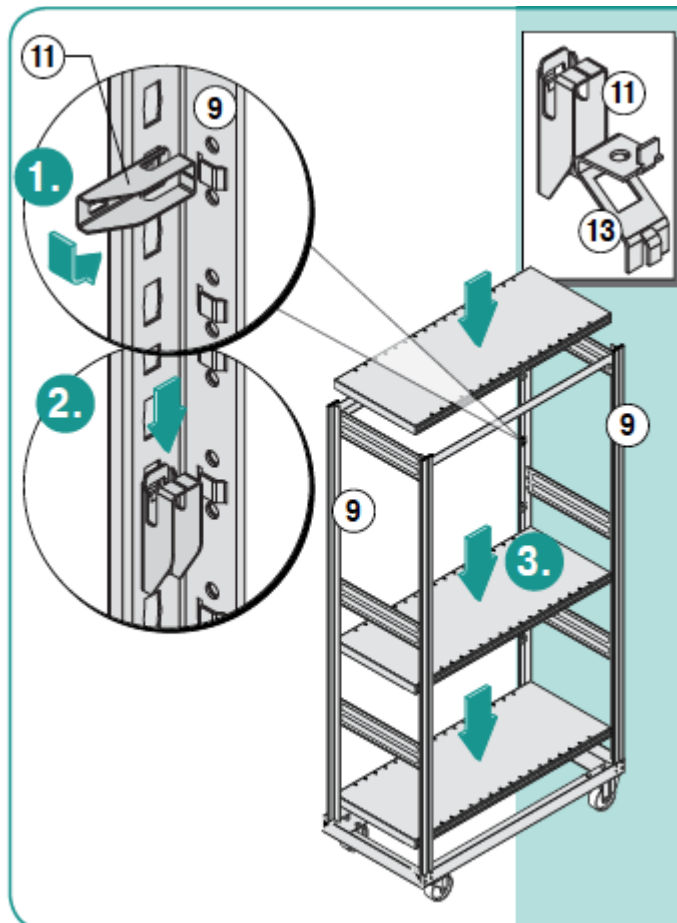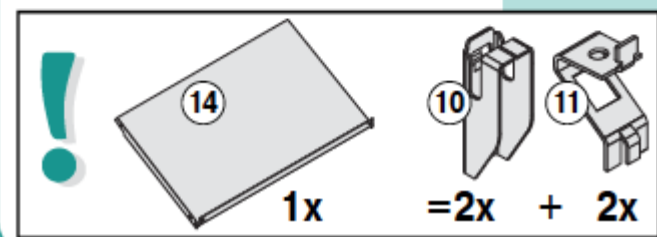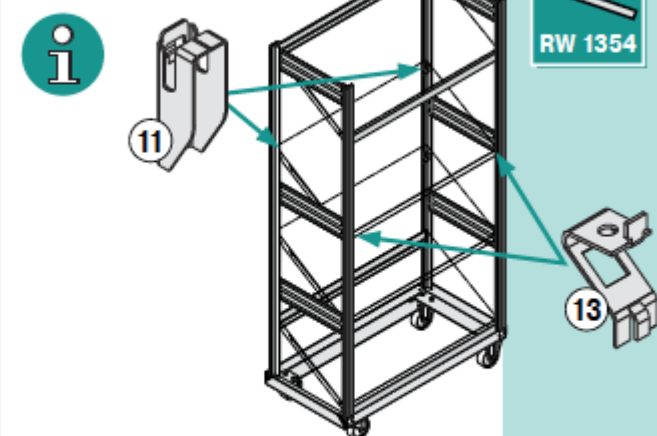

15				1x
16		M5x16 mm DIN EN ISO 4017 8.8		2x
17		Ø 5,3 mm DIN EN ISO 7089		2x
18		M5 DIN EN ISO 4032 8		2x

